



USER GUIDE



EZ Connect™ N
Draft 11n Wireless USB2.0 Adapter

SMCWUSBS-N2



EZ Connect™ N Draft 11n Wireless USB 2.0 Adapter User Guide

The easy way to make all your network connections

SMC®

N e t w o r k s

20 Mason

Irvine, CA 92618

Phone: (949) 679-8000

November 2007

R01 F1.0

Copyright

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2007 by
SMC Networks, Inc.
20 Mason
Irvine, CA 92618

All rights reserved.

Trademarks:

SMC is a registered trademark; and EZ Connect N and EZ Switch are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

COMPLIANCES

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SAR compliance has been established in typical laptop computer(s) with USB slot, and product could be used in typical laptop computer with USB slot. Other application like handheld PC or similar device has not been verified and may not compliance with related RF exposure rule and such use shall be prohibited.

CE (Europe)

This device can be operated in the EU without restrictions indoor. However, operated outdoors in France is restricted to 2400 ~ 2454 MHz (Channel 1 ~ 7).

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with IC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

Australia/New Zealand AS/NZS 4771



N11846

Contact SMC at:

SMC Networks, Inc.

20 Mason

Irvine, CA 92618

Phone: (949) 679-8000

EC Declaration of Conformity C €0682 ⓘ

SMC Contact for this device in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Fructuos Gelabert 6-8, 2, 4a,
08970 - Sant Joan Despi,
Barcelona, Spain

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following references have been applied in order to prove presumption of compliance with the R&TTE Directive 1999/5/EC:

- EN 300 328
- EN 301 489-1
- EN 301 489-17
- EN 60950-1

Council recommendation 1999/519/EC of 12 July 1999, limitations of exposure of the general public to electromagnetic fields (0 Hz to 300 GHz)

[Czech]	Společnost SMC Networks tímto prohlašuje, že toto rádiové zařízení LAN je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES. Oficiální ES prohlášení o shodě je uvedeno v příslušné části k produktu na webu http://www.smc.com
[Danish]	SMC Networks erklærer herved, at følgende Radio LAN-enhed overholder de væsentlige krav og andre relevante bestemmelser i direktiv 1999/5/EF. Den officielle EU-overensstemmelseserklæring er tilgængelig under det relevante produktafsnit på følgende webadresse: http://www.smc.com .
[German]	Hiermit erklärt SMC Networks, dass sich dieses Wireless LAN Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. Die offizielle EC-Declaration of Conformity finden Sie im Internet unter http://www.smc.com unter der entsprechenden Produktkategorie.
[Estonian]	Käesolevaga kinnitab SMC Networks, et see Radio LAN seade vastab direktiivi 1999/5/EÜ põhinõuetele ja teistele asjakohastele sätetele. Ametliku EÜ vastavusdeklaratsiooni leiata vastavast tootejaotisest aadressil http://www.smc.com .
[English]	Hereby, SMC Networks, declares that this Radio LAN device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The official EC-Declaration of Conformity can be found under the corresponding product section on the web http://www.smc.com .
[Spanish]	Por medio de la presente SMC Networks declara que el Radio LAN device cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE. The official EC-Declaration of Conformity can be found under the corresponding product section on the web http://www.smc.com
[Greek]	Με την παρούσα, η SMC Networks, δηλώνει ότι η συσκευή ασύρματου τοπικού δικτύου συμμορφώνεται με τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της Οδηγίας 1999/5/EK. Η επίσημη δήλωση συμμόρφωσης EK παρέχεται στην αντίστοιχη ενότητα προϊόντων, στην ιστοσελίδα http://www.smc.com .
[French]	Par la présente SMC Networks déclare que l'appareil Radio LAN device est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE. La déclaration de conformité officielle peut être trouvée sur notre site internet http://www.smc.com dans la rubrique Produits.
[Italian]	Con la presente SMC Networks dichiara che questo Radio LAN device è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE. La Dichiarazione di conformità CE ufficiale è disponibile nella sezione dedicata al rispettivo prodotto sul sito Web http://www.smc.com .

COMPLIANCES

[Latvian]	Ar šo SMC Networks deklarē, ka Radio LAN device atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītiem noteikumiem. Oficiālā EK atbilstības deklarācija ir atrodamā attiecīgā produkta sadaļā tīmeklī http://www.smc.com .
[Lithuanian]	Šiuo „SMC Networks“ deklaruoja, kad šis radijo LAN įrenginys atitinka esminius reikalavimus ir kitas 1999/5/EB Direktivos nuostatas. Oficialią jo EB atitikties deklaraciją galima rasti atitinkamų gaminių skyriuje šiame tinklalapyje: http://www.smc.com .
[Dutch]	Hierbij verklaart SMC Networks dat het toestel Radio LAN device in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG. Het officiële EC- gelijkvormigheidsattest kan men vinden op de internetsite http://www.smc.com onder de betrokken productcategorie.
[Maltese]	B'dan, SMC Networks, tididikjara li dan it-tagħmir LAN tar-Radju huwa konformi mar-reqwiżiti essenzjali u dispożizzjonijiet rilevanti oħra ta' Direttiva 1999/5/KE. Id-Dikjarazzjoni ta' Konformità uffiċjali tal-KE tinsab fit-taqsimha korrispondenti fis-sit ta' l-Internet http://www.smc.com .
[Hungarian]	Az SMC Networks kijelenti, hogy a Radio LAN eszköz megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak. A hivatalos EC megfeleléségi nyilatkozat megtalálható a vonatkozó termék ismertetőjénél, a következő címen: http://www.smc.com
[Polish]	Firma SMC Networks niniejszym oświadczca, że urządzenie Radio LAN jest zgodne z zasadniczymi wymaganiami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC. Oficjalna Deklaracja zgodności UE znajduje się w odpowiedniej sekcji produktu w witrynie http://www.smc.com .
[Portuguese]	A SMC Networks declara que este dispositivo de LAN de Rádio está em conformidade com os requisitos essenciais e com outras provisões relevantes da Directiva 1999/5/CE. A Declaração de Conformidade CE oficial encontra-se na secção correspondente do produto na Web, http://www.smc.com .
[Slovenian]	Družba SMC Network izjavlja, da je naprava Radio LAN skladna z bistvenimi zahtevami in drugimi ustreznimi predpisi direktive 1999/5/ES. Za uradno izjavo o skladnosti ES glejte razdelek za ustrezni izdelek na spletni strani http://www.smc.com .
[Slovak]	Spoločnosť SMC Networks týmto vyhlasuje, že toto zariadenie Radio LAN spĺňa základné požiadavky a ďalšie príslušné ustanovenia smernice 1999/5/ES. Oficiálne prehlásenie ES o zhode je uvedené v sekcii príslušného produktu v lokalite http://www.smc.com .
[Finnish]	SMC Networks vakuuttaa täten, että Radio LAN device -tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen. EY:n virallinen vaatimustenmukaisuusvakuutus on tuotteen kohdalla Web-sivustossa http://www.smc.com .

[Swedish]	Härmed intygar SMC Networks att denna Radio LAN-apparat uppfyller de väsentliga egenskapskrav och övriga relevanta bestämmelser i direktiv 1999/5/EG. Den officiella EG-försäkran om överensstämmelse finns under motsvarande produktavsnitt på http://www.smc.com .
[Icelandic]	Hér með lýsir SMC Networks því yfir að þessi Radio LAN búnaður er í samræmi við grunnkröfur og aðrar viðeigandi kröfur, sem gerðar eru í tilskipun 1999/5/EB. Opinberu EB-samræmisýfirlýsinguna er að finna í viðeigandi hluta um þennan búnað á vefsetrinu http://www.smc.com .
[Norwegian]	SMC Networks erklærer herved at Radio LAN-enheten er i samsvar med de grunnleggende kravene og øvrige relevante krav i direktiv 1999/5/EF. Denne offisielle EU-konformitetserklæringen finnes under korresponderende produktseksjon på Internett: http://www.smc.com .

Countries of Operation & Conditions of Use in EC/ EFTA member states

[English]	This device is a 2.4 GHz wireless LAN transceiver, intended for indoor home and office use in all notified EC and EFTA member states. In accordance with article 6.4 of the R&TTE Directive 1999/5/EC the following EC/ EFTA member states have been notified: Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxembourg, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom, Portugal, Greece, Ireland, Iceland. Requirements for outdoor operation, like license requirements and allowed channels of operation apply in some countries. Please contact your local regulation authority or SMC Networks for details on current restrictions for outdoor use.
[French]	<i>Ce produit est un appareil radio LAN transceiver de 2.4 GHz destiné aux PME et à l'utilisation domestique dans tous les pays certifiés conformes aux conditions de l'EU et de l'EFTA. En accord avec l'article 6.4 de la R&TTE directive 1999/5/EC, les membres de la EU et de l'EFTA sont les suivants : Autriche, Belgique, Danemark, Finlande, France, Allemagne, Italie, Luxembourg, Pays-Bas, Norvège, Espagne, Suède, Suisse, Royaume-Uni, Portugal, Grèce, Irlande, Islande. Des conditions sont appliquées à certains pays pour l'utilisation en extérieur, tels que des licences spécifiques et des canaux d'opération. Veuillez contacter votre autorité locale ou SMC Networks pour plus de détails quant aux restrictions actuelles concernant l'utilisation en extérieur.</i>

[Dutch]	<p>Dit toestel is een 2.4 Ghz draadloze Lan transceiver, bestemd voor gebruik binnen huis en kantoor in alle geïnfomeerde lidstaten van de EC en de EFTA. In overeenstemming met artikel 6.4 van de R&T TE Directive 1999/5/EC zijn de volgende EC/EFTA lidstaten verwittigd: België, Denemarken, Duitsland, Finland, Frankrijk, Griekenland, Ierland, IJsland, Italië, Luxemburg, Nederland, Noorwegen, Oostenrijk, Portugal, Spanje, Verenigd Koninkrijk, Zweden, Zwitserland. Benodigdheden voor gebruik buiten, zoals gebruiksvergunningen en toegelaten werkkanalen zijn van toepassing in sommige landen. Gelieve uw lokale instantie of SMC Networks te contacteren voor details op huidige beperkingen voor gebruik in buitenlucht.</p>
[Spanish]	<p>Este aparato es un transmisor inalámbrico de 2.4 GHz, previsto para el uso interior en domicilios y Pymes en todos los Estados de la CE y la EFTA notificados. De acuerdo con el artículo 6.4 de la Directiva R&TTE 1999/5/EC los siguientes estados de la CE y de la EFTA han sido notificados: Austria, Bélgica, Dinamarca, Finlandia, Francia, Alemania, Italia, Luxemburgo, Países Bajos, Noruega, España, Suecia, Suiza, Reino Unido, Portugal, Grecia, Irlanda, Islandia. Los requisitos para su uso exterior, como requerimiento de licencia y canales de operación permitidos se aplican en algunos países. Por favor contacte la autoridad reguladora local o SMC Networks para más detalles en relación con las restricciones actuales para uso exterior.</p>
[German]	<p><i>Dieses Wireless LAN Gerät arbeitet im 2.4 GHz Frequenzband und ist für den Einsatz im Innenbereich in den benachrichtigten EC/ EFTA Mitgliedstaaten geeignet. In Übereinstimmung mit Artikel 6.4 der R&TTE Direktive 1999/5/EC wurden folgende Mitgliedstaaten benachrichtigt: Österreich, Belgien, Dänemark, Finland, Frankreich, Deutschland, Italien, Luxemburg, Niederlande, Norwegen, Spanien, Schweden, Schweiz, Großbritannien, Portugal, Griechenland, Irland, Island. Für den Einsatz im Aussenbereich sind in einigen Ländern Lizenzen erforderlich oder die Anzahl der Kanäle ist eingeschränkt. Bitte kontaktieren Sie Ihre Regulierungsbehörde oder SMC Networks für die aktuellen Einschränkungen beim Einsatz im Aussenbereich.</i></p>
[Czech]	<p>Toto zařízení je přijímač a vysílač pro bezdrátové sítě LAN v pásmu 2,4 GHz, určený pro použití v interiéru domácnosti a kanceláři ve všech členských zemích ES a ESVO, kterým byl oznámen záměr uvést zařízení na trh. V souladu s čl. 6 odst. 4 směrnice 1999/5/ES o rádiových zařízeních a telekomunikačních koncových zařízeních byly uvědoměny tyto členské země ES nebo ESVO: Belgie, Dánsko, Finsko, Francie, Irsko, Island, Itálie, Lucembursko, Německo, Nizozemsko, Norsko, Portugalsko, Rakousko, Řecko, Spojené království, Španělsko, Švédsko, Švýcarsko. Na použití ve venkovním prostředí se v některých zemích vztahují určité požadavky, např. požadavky na licenci nebo provoz v povolených kanálech. O omezení venkovního použití se informujte u místních regulátorů nebo u společnosti SMC Networks.</p>

[Danish]	<p>Enheden er en 2,4 GHz trådløs LAN-transceiver, beregnet til indendørs hjemme- og kontorbrug i alle notificerede EU- og EFTA-medlemslande. I henhold til afsnit 6.4 i R&TTE-direktivet 1999/5/EF er følgende EU-/EFTA-medlemslande notificeret: Østrig, Belgien, Danmark, Finland, Frankrig, Tyskland, Grækenland, Island, Irland, Italien, Luxembourg, Holland, Norge, Portugal, Spanien, Sverige, Schweiz og Storbritannien. I visse lande gælder der krav vedrørende udendørs betjening af enheden, f.eks. licenskrav og tilladte betjeningskanaler. Kontakt de lokale lovgivende myndigheder eller SMC Networks for at få oplysninger om aktuelle begrænsninger vedrørende udendørs betjening.</p>
[Estonian]	<p>See seade on 2.4 GHz juhtmeta LAN vastuvõtu-saatejaam, mis on mõeldud kodus ja kontoris kasutamiseks kõikides teavitatud EÜ ja Euroopa Vabakaubanduse Assotsiatsiooni (EFTA) liikmesriikides. Vastavalt R&TTE direktiivi 1999/5/EÜ paragrahvile 6.4 on teavitatud järgmisi EÜ/EFTA liikmesriike: Austriat, Belgiat, Taanit, Soomet, Prantsusmaad, Saksamaad, Itaaliat, Luksemburgi, Hollandit, Norrat, Hispaaniat, Rootsit, Šveitsi, Ühendkuningriiki, Portugali, Kreekat, Iirimaa, Islandi. Mõningates riikides kehtivad väljas kasutamiseks nõuded, näiteks litsentsinõuded ja lubatud töökanalid. Palun teavitage vastavat kohalikku ametkonda või ettevõtet SMC Networks'i, kui soovite täpsemad andmeid väljas kasutamisel kehtivate piirangute kohta.</p>
[Greek]	<p>Αυτή η συσκευή είναι ένας ασύρματος πομπодέκτης τοπικού δικτύου 2,4 GHz, που προορίζεται για οικιακή και επαγγελματική χρήση σε εσωτερικό χώρο, σε όλα τα κράτη-μέλη της ΕΚ και της ΕΖΕΣ. Σύμφωνα με το άρθρο 6.4 της Οδηγίας για ραδιοεξοπλισμό και τηλεπικοινωνιακό τεμαχικό εξοπλισμό (R&TTE), 1999/5/EK, έχουν ανακοινωθεί τα ακόλουθα κράτη-μέλη ΕΕ/ΕΖΕΣ: Αυστρία, Βέλγιο, Δανία, Φιλανδία, Γαλλία, Γερμανία, Ιταλία, Λουξεμβούργο, Ολλανδία, Νορβηγία, Ισπανία, Σουηδία, Ελβετία, Ηνωμένο Βασίλειο, Πορτογαλία, Ελλάδα, Ιρλανδία, Ισλανδία. Σε ορισμένες χώρες επιβάλλονται απαιτήσεις για χρήση σε εξωτερικό χώρο, όπως απαιτήσεις παραχώρησης άδειας και επιτρεπόμενα κανάλια λειτουργίας. Απευθυνθείτε στην τοπική αρμόδια αρχή ή στην SMC Networks για λεπτομέρειες σχετικά με τους τρέχοντες περιορισμούς για χρήση σε εξωτερικό χώρο.</p>
[Italian]	<p>Il presente device è un ricetrasmittitore LAN wireless da 2,4 GHz, previsto per l'uso in interni a casa e in ufficio in tutti gli Stati membri della CE e dell'EFTA notificati. Conformemente all'articolo 6.4 della Direttiva 1999/5/CE R&TTE, sono stati notificati i seguenti Stati membri della CE/dell'EFTA: Austria, Belgio, Danimarca, Finlandia, Francia, Germania, Grecia, Irlanda, Islanda, Italia, Lussemburgo, Norvegia, Paesi Bassi, Portogallo, Regno Unito, Spagna, Svezia, Svizzera. In alcuni Paesi si applicano i requisiti per il funzionamento in esterni, quali requisiti di licenza e canali consentiti. Contattare l'Autorità normativa locale del proprio Paese o SMC Networks per informazioni dettagliate sulle limitazioni correnti per l'utilizzo in esterni.</p>

[Latvian]	<p>Šī ierīce ir 2,4 GHz bezvadu LAN raidzītvērētājs, kas paredzēts izmantošanai iekštelpās mājās un birojos visās paziņotajās EK un EBTA (European Free Trade Association - Eiropas brīvās tirdzniecības asociācija) dalībvalstīs. Atbilstoši radioiekārtu un telekomunikāciju gala iekārtu direktīvas 1999/5/EK 6.4. pantam paziņotās EK/EBTA valstis ir : Austrija, Beļģija, Dānija, Somija, Francija, Vācija, Itālija, Luksemburga, Nīderlande, Norvēģija, Spānija, Zviedrija, Šveice, Apvienotā Karaliste, Portugāle, Grieķija, Īrija, Islande. Dažās valstīs ir spēkā ierobežojumi lietošanai ārvīdē, piemēram, licences prasības un darbībai atļautie kanāli. Lūdzu, sazinieties ar vietējo regulējošo instanci vai SMC Network, lai saņemtu informāciju par pašreizējiem ierobežojumiem lietošanai ārvīdē.</p>
[Lithuanian]	<p>Šis įrenginys yra 2,4 GHz belaidis LAN siųstuvas-imtuvas, skirtas naudoti patalpose namie ar biure visose notifikuotose EB ir ELPA šalyse narėse. Pagal RTTE Direktyvos 1999/5/EB 6.4 straipsnį, notifikuotos yra šios EB/ELPA šalys narės: Austrija, Belgija, Danija, Suomija, Prancūzija, Vokietija, Italija, Liuksemburgas, Nyderlandai, Norvegija, Ispanija, Švedija, Šveicarija, Jungtinė Karalystė, Portugalija, Graikija, Airija, Islandija. Kai kuriose šalyse galioja tam tikri reikalavimai norint naudoti įrenginį lauke, pvz., licencijos ir suteikti ryšio kanalai. Jei norite sužinoti, kokie apribojimai galioja norint naudoti įrenginį lauke, kreipkitės į nacionalinę reguliavimo instituciją arba „SMC Networks“.</p>
[Maltese]	<p>Dan it-tagħmir huwa LAN transreciever mingħajr fili ta' 2.4 GHz maħsub biex jintuza fuq ġewwa fi djar u uffiċċini fil-pajjiżi notifikati tal-KE u l-Istati Membri ta' l-EFTA. B'mod konformi ma' Artikolu 6.4 tad-Direttiva R&TTE 1999/5/KE l-Istati Membri tal-KE/EFTA li ġejjin ġew notifikati: L-Awstrija, Il-Belġju, Id-Danimarka, Il-Finlandja, Franza, Il-Ġermanja, L-Italja, Il-Lussemburgu, L-Olanda, In-Norveġja, Spanja, L-Iżveżġja, L-Iżvizzera, Ir-Renju Unit, Il-Portugal, Il-Greċja, L-Irlanda, L-Islanda. Rekwiżiti għal tħaddim fuq barra, bħal htigijiet ta' licenzja u kanali permessi għal tħaddim japplikaw f'ċertu pajjiżi. Jekk jogħġbok ikkuntattja lil-l-awtorità regolatorja lokali jew SMC Networks għal dettali dwar restrizzjonijiet attwali dwar l-użu fuq barra.</p>
[Hungarian]	<p>Ez az eszköz egy 2,4 GHz-es vezeték nélküli LAN adó-vevő, amely beltéri és irodai használatra készült, és az összes értesített EC- és EFTA-tagországban használható. Az 1999/5/EC jelű R&TTE előírás 6.4-es cikkének megfelelően a következő EC/ EFTA tagországok kaptak értesítést: Ausztria, Belgium, Dánia, Finnország, Franciaország, Németország, Olaszország, Luxemburg, Hollandia, Norvégia, Spanyolország, Svédország, Svájc, Egyesült Királyság, Portugália, Görögország, Írország és Izland. Egyes országokban külön előírások vonatkoznak a kültéri használatra, például a licence és az engedélyezett csatornákra. A kültéri használatra vonatkozó aktuális előírásokkal kapcsolatos részletekért forduljon a helyi szabályozó hatósághoz vagy az SMC Networkshöz.</p>

[Polish]	<p>Niniejsze urządzenie to urządzenie do odbierania i przesyłania sygnału (transceiver) w bezprzewodowej sieci LAN o częstotliwości 2,4 GHz, przeznaczone do użytku wewnątrz pomieszczeń, w domach i biurach we wszystkich krajach członkowskich UE i EFTA. Zgodnie z artykułem 6.4 dyrektywy 1999/5/EC dotyczącej norm dla urządzeń radiowych i końcowych urządzeń transmisyjnych powiadomione zostały następujące kraje członkowskie: Austria, Belgia, Dania, Finlandia, Francja, Niemcy, Włochy, Luksemburg, Holandia, Hiszpania, Szwecja, Szwajcaria, Wielka Brytania, Portugalia, Grecja, Irlandia, Islandia. W niektórych krajach obowiązują wymagania dotyczące działania na zewnątrz budynków, na przykład wymagania licencyjne i dozwolone kanały pracy. Szczegółowe informacje na temat obowiązujących ograniczeń użytkowania zewnętrznego można uzyskać, kontaktując się z lokalnym urzędem regulacji lub firmą SMC Networks.</p>
[Portuguese]	<p>Este dispositivo é um transreceptor de LAN sem fios de 2,4 GHz, destinado a uma utilização interior em casa e no escritório, em todos os Estados membros notificados da CE e da EFTA. De acordo com o artigo 6.4 da Directiva sobre R&TTE 1999/5/CE, foram notificados os seguintes Estados membros da CE/EFTA: Áustria, Bélgica, Dinamarca, Finlândia, França, Alemanha, Itália, Luxemburgo, Holanda, Noruega, Espanha, Suécia, Suíça, Reino Unido, Portugal, Grécia, Irlanda, Islândia. Os requisitos para uma utilização no exterior, tais como de licença e de canais de funcionamento permitidos aplicam-se a alguns países. Para obter informações sobre as restrições de utilização no exterior, contacte a autoridade local competente ou a SMC Networks.</p>
[Slovenian]	<p>Ta naprava je oddajno-sprejemna enota za brezžično lokalno omrežje, namenjena uporabi na domu ali v pisarni v vseh priglasih državah članicah ES in EFTA. Skladno s členom 6.4 Direktive 1999/5/ES o radijski opremi in telekomunikacijski terminalski opremi so bile obveščene naslednje države članice ES/EFTA: Avstrija, Belgija, Danska, Finska, Francija, Nemčija, Italija, Luksemburg, Nizozemska, Norveška, Španija, Švedska, Švica, Velika Britanija, Portugalska, Grčija, Irska, Islandija. V nekaterih državah veljajo zahteve za delovanje na prostem, kot so zahteve za dovoljenje in dovoljeni kanali za delovanje. Če potrebujete natančne informacije o trenutnih omejitvah uporabe na prostem, se obrnite na lokalni regulativni organ ali družbo SMC Networks.</p>
[Slovak]	<p>Toto zariadenie je prijímač a vysielač pre bezdrôtové siete v pásme 2,4 GHz a je určené na použitie v interiéroch domácností a kancelárií vo všetkých členských štátoch ES a EZVO, ktorým bol oznámený zámer uviesť zariadenie na trh. V súlade s čl. 6 odst. 4 smernice 1999/5/ES o rádiovom zariadení a koncových telekomunikačných zariadeniach boli upovedomené nasledujúce členské štáty ES/EZVO: Belgicko, Dánsko, Francúzsko, Fínsko, Grécko, Holandsko, Island, Írsko, Luxembursko, Nemecko, Nórsko, Portugalsko, Rakúsko, Španielsko, Švajčiarsko, Švédsko, Taliansko, Veľká Británia. V niektorých štátoch sa na prevádzku v exteriéroch vzťahujú určité požiadavky, napríklad požiadavky na licenciu alebo požiadavky na prevádzkové kanály. Podrobné informácie o aktuálnych obmedzeniach pri prevádzke v exteriéroch vám poskytnú miestne regulačné orgány alebo spoločnosť SMC Networks.</p>

[Finnish]	<p>Laite on 2,4 GHz:n langaton LAN-vastaanotin, joka on tarkoitettu koti- ja toimistokäyttöön kaikissa EY:n ja EFTAn jäsenmaissa, joihin siitä on ilmoitettu. Radio- ja telepäätelaitedirektiivin 1999/5/EY mukaisesti seuraaville EY-/EFTA-maille on ilmoitettu: Itävalta, Belgia, Tanska, Suomi, Ranska, Saksa, Italia, Luxemburg, Alankomaat, Norja, Espanja, Ruotsi, Sveitsi, Iso-Britannia, Portugali, Kreikka, Irlanti ja Islanti. Joissakin maissa ulkokäyttöä koskevat erilliset vaatimukset, kuten erikseen anottava lupa ja sallittujen kanavien rajoittaminen. Ota yhteyttä paikalliseen käyttöä valvovaan viranomaiseen tai SMC Networksiin, jos haluat lisätietoja laitteen ulkokäytön rajoituksista.</p>
[Swedish]	<p>Apparaten är en 2,4 GHz trådlös LAN-mottagare för inomhusbruk i hem och på kontor i alla underrättade EG- och EFTA-medlemsstater. Enligt artikel 6.4 i R&TTE-direktivet 1999/5/EG är följande EG-/EFTA-stater underrättade: Österrike, Belgien, Danmark, Finland, Frankrike, Tyskland, Italien, Luxemburg, Nederländerna, Norge, Spanien, Sverige, Schweiz, Storbritannien, Portugal, Grekland, Irland och Island. I vissa länder tillkommer krav för utomhusbruk, t.ex. licenskrav och tillåtna användarkanaler. Kontakta lokala tillsynsmyndigheter eller SMC Networks för information om aktuella bestämmelser för utomhusbruk.</p>
[Icelandic]	<p>Þessi búnaður er 2,4 GHz þráðlaust LAN sendivíðtæki til notkunar innanhúss á heimili og skrifstofu í öllum tilkynntum aðildarríkjum EB og EFTA. Í samræmi við grein 6.4 í R&TTE tilskipuninni 1999/5/EB hefur eftirfarandi aðildarríkjum EB/EFTA verið tilkynnt þar um: Austurríki, Belgía, Danmörk, Finnland, Frakkland, Þýskaland, Ítalía, Lúxemborg, Holland, Noregur, Spánn, Svíþjóð, Sviss, Bretland, Portúgal, Grikkland, Írland, Ísland. Kröfur fyrir notkun utanhúss, svo sem kröfur um leyfi og heimilaðar rásir eiga við í sumum löndum. Hafið samband við reglugerðaryfirvöld á hverjum stað eða SMC Networks til að fá upplýsingar um gildandi takmarkanir á notkun utanhúss.</p>
[Norwegian]	<p>Denne enheten er en trådløs 2.4 GHz LAN-mottaker som er beregnet for innendørs privat- og kontorbruk i alle underrettede EF- og EFTA-medlemsstater. I overensstemmelse med artikkel 6.4 i R&TTE-direktivet 1999/5/EF, har følgende EF-/EFTA-medlemsstater blitt underrettet: Østerrike, Belgia, Danmark, Finland, Frankrike, Tyskland, Italia, Luxembourg, Nederland, Norge, Spania, Sverige, Sveits, Storbritannia, Portugal, Hellas, Irland og Island. Krav for utendørsbruk, som lisenskrav og tillatte brukskanaler, gjelder i noen land. Ta kontakt med din lokale regulerende myndighet eller SMC Networks for detaljert informasjon om gjeldende begrensninger for utendørs bruk.</p>

Requirements for indoor vs. outdoor operation, license requirements and allowed channels of operation apply in some countries as described below:

- . In Italy the end-user must apply for a license from the national spectrum authority to operate this device outdoors.
- . In Belgium outdoor operation is only permitted using the 2.46 - 2.4835 GHz band: Channel 13.
- . In France outdoor operation is only permitted using the 2.4 - 2.454 GHz band: Channels 1 - 7.

Italian:

In alcuni Paesi si applicano i requisiti per il funzionamento in interni-esterni, i requisiti di licenza e i canali consentiti, come descritto si seguito:

- In Italia l'utente finale deve richiedere una licenza all'Autorità competente nazionale per il funzionamento in esterni del device.

Dutch:

Vereisten voor werking indoor versus outdoor, licentie vereisten en toegestane kanalen voor gebruik zijn van toepassing in bepaalde landen zoals hieronder beschreven.

- In België is outdoor gebruik enkel toegestaan gebruik makend van de 2.46 - 2.4835 GHz band: Kanaal 13.

French:

Conditions requises pour des installations intérieures ou extérieures, licences requises et canaux autorisés dans certains pays comme décrits ci-dessous:

- En Belgique, l'installation extérieure est seulement autorisée sur la bande 2.46 - 2.4835 GHz:: Canal 13
- En France, l'installation extérieure est seulement autorisée sur la bande 2.4 - 2.454 GHz : Canal 1-7

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

TABLE OF CONTENTS

EZ Connect™ N Draft 11n Wireless	
USB 2.0 Adapter	1
Features	2
Applications	3
System Requirements	4
Package Contents	5
Hardware Description	6
LED	6
Driver and Utility Installation	7
For Windows 2000/XP	7
EZ Installation Wizard CD	7
Hardware Installation	13
SMCWUSBS-N2 Utility	15
Configuration	17
Common	18
Security	19
Advanced	24
Link Information	26
IP Information	28
Site Survey	30
Version Information	32

TABLE OF CONTENTS

Network Configuration and Planning33

- Network Topologies 33
 - Ad Hoc Wireless LAN 33
 - Infrastructure Wireless LANs 34
- Setting the Communication Domain 35
 - Stationary Wireless PCs 35
 - Roaming Wireless PCs 35

Troubleshooting37

- Adapter Installation Problems 37
- Network Connection Problems 38

Specifications39

- General Specifications 39

EZ CONNECT™ N DRAFT 11N WIRELESS USB 2.0 ADAPTER

The EZ Connect™ N Draft 11n Wireless USB2.0 Adapter (SMCWUSBS-N2) is another cutting edge introduction in 2.4GHz wireless communication for desktop and notebook computers. Designed for both the home and office, this wireless USB2.0 adapter provides the speed, coverage and security expected by today's wireless users. The SMCWUSBS-N2 is 802.11n draft v2.0 compliant while maintaining full backwards compatibility with the Wireless-G (802.11g) and Wireless-B (802.11b) standards. This next generation standard utilizes advanced MIMO (Multiple-In, Multiple-Out) technology to deliver incredible speed and range. The SMCWUSBS-N2 provides better performance than existing 802.11g technology. Upgrading to Wireless N provides an excellent solution for sharing an Internet connection and files such as video, music, photos, and documents. With security being a key consideration, SMCWUSBS-N2 supports the latest WPA and WPA2 wireless encryption standards, which prevent unauthorized access to wireless networks and ensure data is secure. Wireless security can also be set up easily using Wi-Fi Protected Setup™ (WPS) that enables push button or PIN configuration. The SMCWUSBS-N2 includes an easy installation wizard which guides you step-by-step through the process. Once installed the WLAN utility allows you to scan for available wireless networks and manage multiple network profiles so connecting becomes instantaneous.

Features

- IEEE802.11n draft v2.0 compliant
- Wireless speeds up to 300 Mbps with 40 MHz operating mode
- Increased speed and coverage - up to 15 times the speed of IEEE 802.11g
- Fully backwards compatible with 802.11b/g wireless networks
- Enhances your network security with Wired Equivalent Privacy (WEP), Wi-Fi Protected Access (WPA), and WPA2
- Greater flexibility to locate or move networked PCs
- Easy Plug-n-Play installation and user-friendly configuration
- Integrates with or replaces wired LANs at dramatically lower cost than wired alternatives
- Orthogonal Frequency Division Multiplexing (OFDM) technology provides high speed connection

Applications

EZ Connect wireless products offer fast, reliable, cost-effective network access for wireless clients in applications such as:

- **Remote access to corporate network information**
Email, file transfer, and terminal emulation
- **Difficult-to-wire environments**
Historic or old buildings, asbestos installations, and open areas where wiring is difficult to employ
- **Frequently changing environments**
Retailers, manufacturers, and banks who frequently rearrange the workplace and change location
- **Temporary LANs for special projects or peak times**
Trade shows, exhibitions, and construction sites that need to set up for a short time period. Retailers, airline, and shipping companies who need additional workstations for peak times
- **Access to databases for mobile workers**
Doctors, nurses, retailers, office workers who need access to databases while being mobile in a hospital, retail store, office, campus, etc.
- **SOHO (Small Office Home Office) users**
SOHO users who need quick and easy installation of a small network

System Requirements

Before you install the Wireless USB Adapter, check your system for the following requirements:

- Available 2.0 USB slot
- A PC running Windows 2000/XP/Vista
- CD-ROM drive
- Minimum of 32 MB RAM and 300 MHz CPU
- Minimum of 6 MB of free hard disk space for driver and utility installation
- Another IEEE 802.11n, 802.11g or 802.11b compliant device installed in your network, such as the SMCWBR14S-N2 Draft 11n Wireless 4-port Broadband Router or the SMC7904WBRA-N Draft 11n Wireless 4-port ADSL2/2+ Modem Router.

Package Contents

The Wireless USB Adapter package includes:

- 1 EZ Connect™ N Draft 11n Wireless USB 2.0 Adapter (SMCWUSBS-N2)
- 1 EZ Installation Wizard and Documentation CD
- 1 Quick Installation Guide
- Warranty Information Card

Please register this product and upgrade the product warranty at <http://www.smc.com>

Please inform your dealer if there are any incorrect, missing or damaged parts. If possible, retain the carton and the original packing materials, in case there is a need to return the product.

HARDWARE DESCRIPTION

The SMCWUSBS-N2 adapter provides 300 Mbps connections. It is fully compliant with the specification of the IEEE 802.11n Draft standard. It can be installed in any computer running Windows 2000/XP/Vista, with a 2.0 USB slot.

LED

The Link LED indicator of the SMCWUSBS-N2 is described in the following figure and table.



Figure 1. LED Indicator

Status	Description
On (Green)	Indicates a valid connection.
Slow Flashing	Indicates that the adapter is powered on but no wireless connection.
Fast Flashing	Indicates that the adapter is transmitting or receiving data.

DRIVER AND UTILITY INSTALLATION

The EZ Installation Wizard and Documentation CD that comes with the package contains all the software, including the driver and utility for the SMCWUSBS-N2 adapter. Any new or updated software can be downloaded from the SMC web site at <http://www.smc.com>. Also, check the SMC web site for additional online support.

For Windows 2000/XP

It is recommended that you install the utility and driver software first, before inserting the adapter into your computer.

You may find that the screen shots here do not exactly match your version of Windows. This is because these screen shots were created from Windows XP. Steps for Windows 2000 are similar, but not identical, to Windows XP.


EZ Installation Wizard CD

Note: Installation processes such as this may require the use of your original licensed copy of Windows. Please have your Windows CD available BEFORE proceeding with the installation.


This installation method makes the process as simple and Plug-and-Play as possible. Simply run the driver/utility program, and insert your EZ Connect N Wireless USB 2.0 Adapter.

1. Insert the EZ Installation Wizard and Documentation CD.


2. Click the **Install Driver and Utility** button to continue.

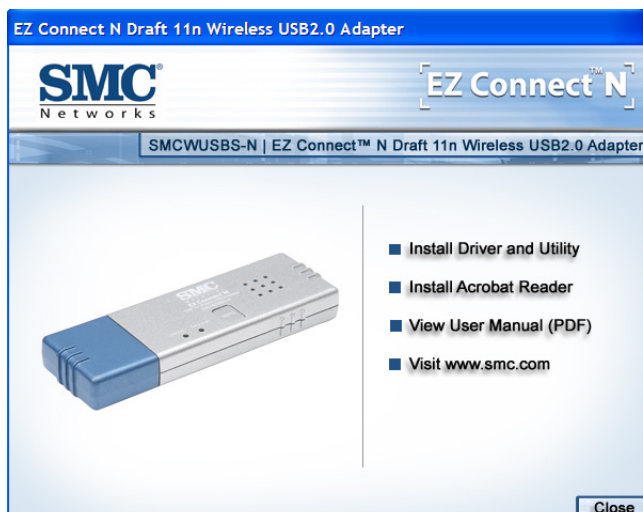



3. Please wait while the Driver and Utility installation wizard begins and copies files.

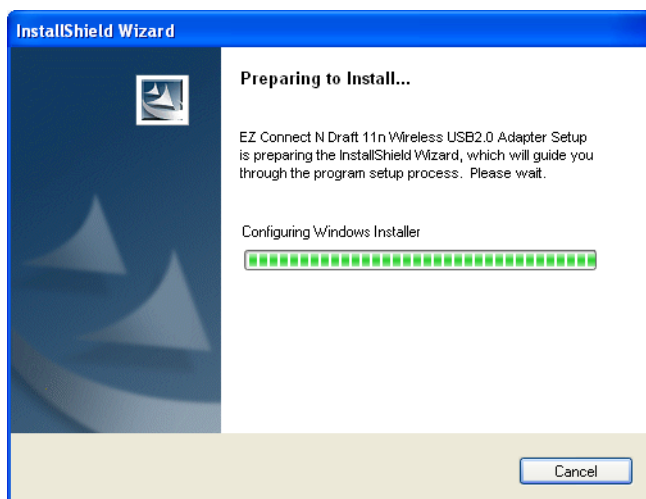

4. Click **Next** to install the program to your Windows system folder.

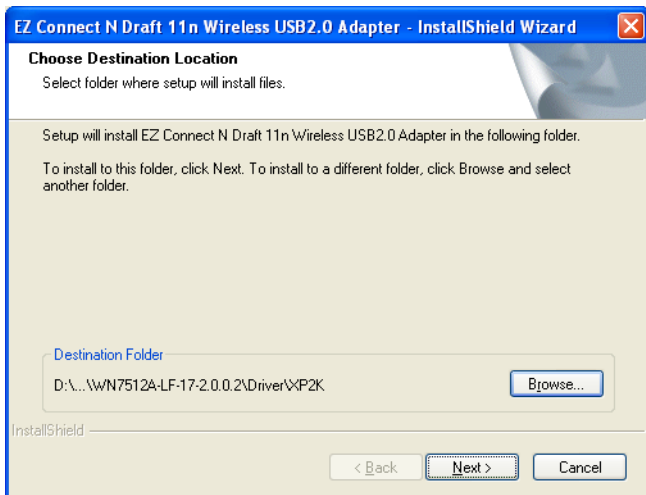


5. Find an available USB slot on your PC (see "Hardware Installation" on page 13). Remove cap from the SMCWUSBS-N2. Completely slide the SMCWUSBS-N2 USB 2.0 adapter in the USB slot of your PC and make sure that there is a firm connection.




6. You will see the Found New Hardware Wizard. Select **Yes** (recommended), and click **Next**.




7. Select **Install the software automatically (Recommended)**, and click **Next**.

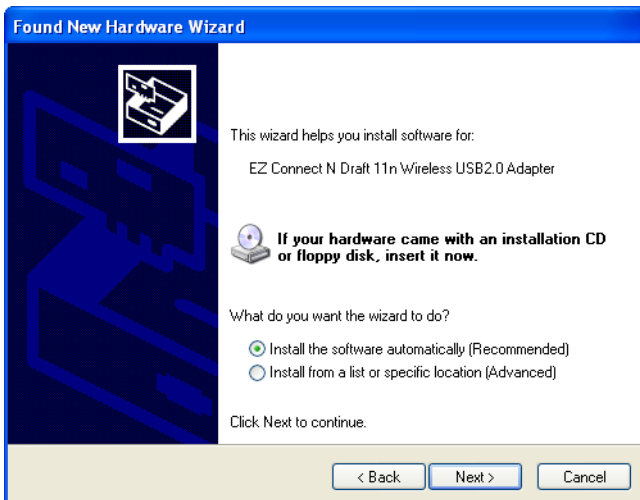

8. The following windows will then appear indicating that the driver has been installed on your system. Click **Finish** to exit the window.

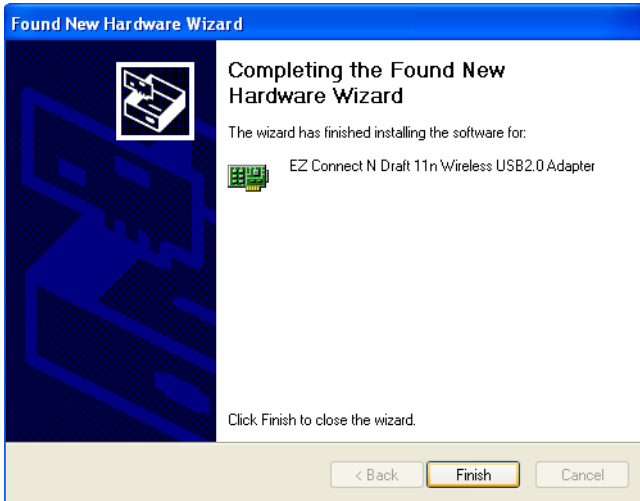

9. Click **Finish** and your Wireless USB Adapter is ready to use.

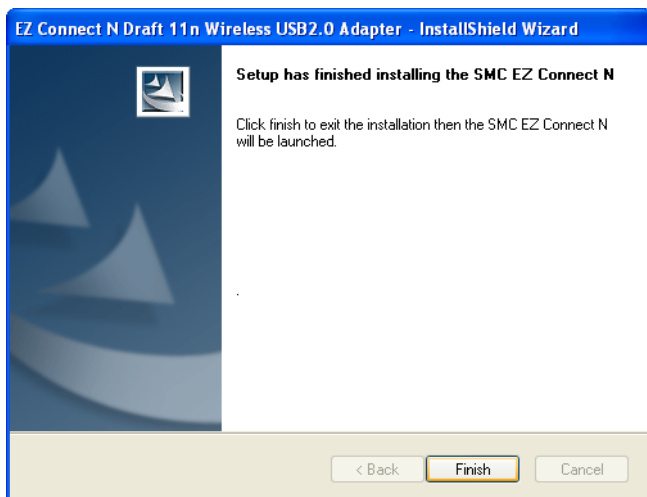

HARDWARE INSTALLATION

Network cards are sensitive to static electricity. To protect the card, avoid touching its electrical components, and touch the ground often to equalize the static charges, before handling the card.

To insert the card:

1. Find an available 2.0 USB slot in your desktop PC or a laptop.



Figure 2. USB Port

Hardware Installation

2. With the adapter's connector facing the USB slot, and the “EZ Connect™ N” label facing up, slide the card completely into the slot as shown below.

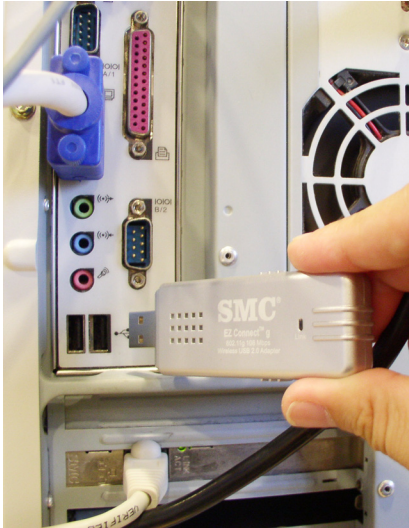


Figure 3. Desktop Installation



Figure 4. Laptop Installation

SMCWUSBS-N2


UTILITY

To communicate with other SMC 802.11n, 802.11g or 802.11b devices, you need to configure the SMCWUSBS-N2 adapter first. Double-click the SMCWUSBS-N2 utility icon on the desktop to launch the configuration utility, or you can access it from the Start menu.

Icon on the desktop:



Icon on the toolbar:

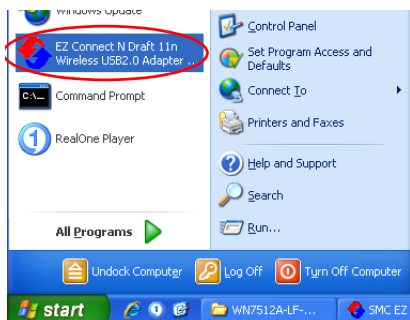

Note that the screen shots were taken from Windows XP and will not look exactly the same in all operating systems.

The SMCWUSBS-N2 utility program includes the following five tabs:

Configuration – Allows you to set parameters for the wireless adapter.

Link Information – Allows you to view network status.

IP Information – Displays TCP/IP data.

Site Survey – Scans/shows all wireless devices within the adapter's signal range.

Version Information – Shows the driver and utility version information.

At the bottom of the screen, there are three boxes that can be selected:

- **Radio On/Radio Off** – This allows you to turn on/off the transmission/reception of the adapter.
- **Help** – Click here to display the help file.
- **Close** – This closes the configuration utility dialog box.

Configuration

Go to the Configuration tab to set parameters for the SMCWUSBS-N2 adapter.

Select Profile – You can select a proper profile from the drop-down menu, or specify a profile name for a specific configuration of parameters.


New – To set up a new profile, click **New**.

Save – To save a new profile after configuring the settings, click **Save**.

Delete – To delete a profile, select the profile from the drop-down menu in the Select Profile field, then click **Delete**.


Auto Profile On/Off - Click this button to automatically load the profile for easy use.

Change Priority- To set the priority list of the profiles that you set up for a quick connection.

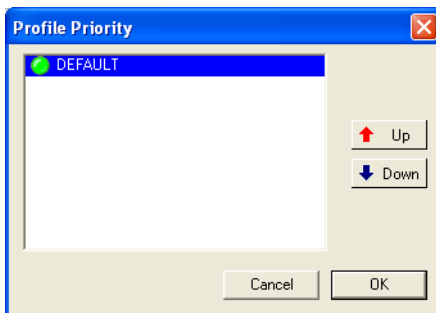

Apply Change - To enable the new setting.

Common

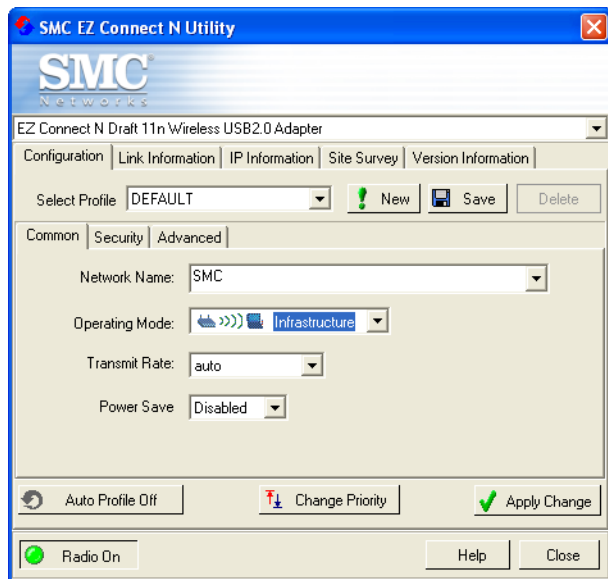

Network Name – Input an SSID for the wireless network to which you want to connect.

Operating Mode – Set the adapter's operating mode to 802.11 Ad Hoc for a network environment that does not have an access point, or to Infrastructure for connections with an access point. (See "Network Topologies" on page 33 for more information.)

Transmit Rate – Indicates the data transmission rate. Select an appropriate transmission speed. Lower speeds will give better range.

The SMCWUSBS-N2 supports 802.11b, 802.11g and 802.11n mode with maximum operation speed of up to 300 Mbps with 40 MHz operating mode. The Wireless USB Adapter is backwards compatible with 802.11b and 802.11g connection speed.


Power Save – To use this function, select the Enabled or Disabled in the Power Save Mode drop-down menu, then click the **Apply Change** button.

Security

The Security ON/Security OFF button indicates whether the security function has been enabled or disabled.

Click the **Security ON/Security OFF** button to enable the security function. (Default: Security OFF)

WEP

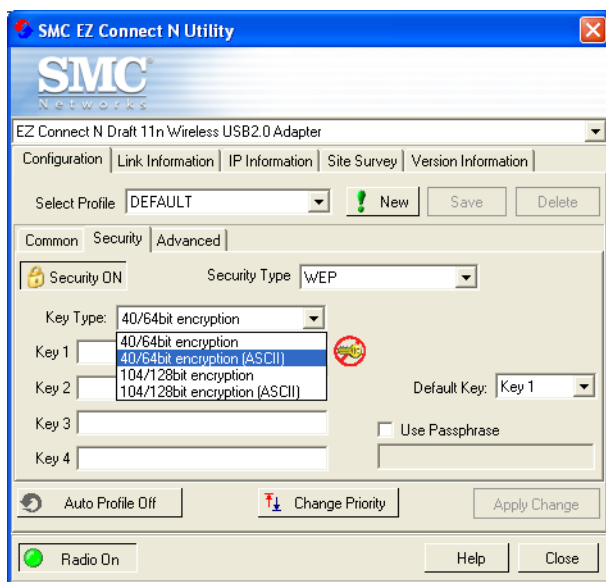

Security Type – WEP (Wired Equivalent Privacy) and WPA(2)-PSK (Wi-Fi Protected Access-Pre-Shared Key) are implemented in the SMCWUSBS-N2 adapter to prevent unauthorized access.

Key Type – Select 64-bit encryption, 64-bit encryption (ASCII), 128-bit encryption, or 128-bit encryption (ASCII).

Default Key – Choose one key, 1~4, for encryption.

Use Passphrase – Check this box to auto-generate keys for encryption. First, check this box, then enter a string of characters into the space. Encryption keys will be generated automatically.

When Key Type is set to 128-bit, only one key will be generated. If Key Type is set to 64-bit, four keys will be generated. Note that you must use the same passphrase and default key on all the other clients in your network.

How to set up WEP:

If you are transmitting sensitive data across wireless channels, you should enable Wired Equivalent Privacy (WEP) encryption. WEP provides a basic level of security, preventing unauthorized access to the network and encrypting data transmitted between wireless clients and the access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network. WEP is the security protocol initially specified in the IEEE 802.11 standard for wireless communications. For more robust wireless security, the SMCWUSBS-N2 provides Wi-Fi Protected Access (WPA) for improved data encryption and user authentication.

Note: Only one key is needed for WEP to function. However, the IEEE 802.11 standard specifies that there must be four keys for each device. For security purposes, the key should be changed on a regular basis. Multiple keys are supported to allow the user to change keys with minimal disruption of the network.

To set up the WEP function, take the following steps:

1. Select 64-bit encryption, 64-bit encryption (ASCII), 128-bit encryption, or 128-bit encryption (ASCII) in the Key Type field.
2. To automatically generate keys, check the **Use Passphrase** box, and type in a string of characters in this field.
3. In the Default Key field, select one key as the default key that you want to use for encryption.
4. Click **Apply Change** to allow the settings to take effect.


Or

1. Select 64-bit encryption, 64-bit encryption (ASCII), 128-bit encryption, or 128-bit encryption (ASCII) in the Key Type field.
2. In the Default Key field, select one key as the default key that you want to use for encryption.
3. Manually type in a string of characters in the corresponding key number field that you selected in step 2.
4. Click **Apply Change** to allow the settings to take effect.

Note: When setting up WEP without using the Use Passphrase function, if the Key Type is set to Hex, only Hexadecimal characters (range: 0~9 and A~F) can be used. When encryption is set to 64-bit, a maximum of 10 Hex characters can be entered in the Key field. When encryption is set to 128-bit, a maximum of 26 Hex characters can be used. If the Key Type is set to ASCII, and encryption is set to 64-bit, then 5 ASCII characters can be used in the Key field. For 128-bit encryption, 13 ASCII characters can be used.

WPA-PSK/WPA2-PSK

How to set up WPA/WPA2-PSK:

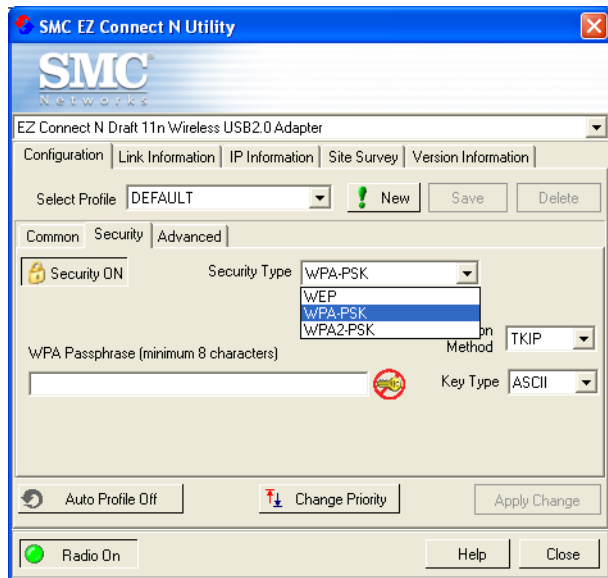

Wi-Fi Protected Access is a standards-based, interoperable security enhancement that strongly increases the level of data protection and access control for existing and future wireless LAN systems. It will be forward-compatible with the upcoming IEEE 802.11i standard. WPA employs a combination of several technologies to provide an enhanced security solution for 802.11 wireless networks, including TKIP (Temporal Key Integrity Protocol) for data protection and 802.1x for authenticated key management. WPA provides a simple operating mode that uses just a pre-shared password for network access. The Pre-Shared Key mode uses a common password for user authentication that is manually entered on the access point and all wireless clients on the network.


To use the WPA function, take the following steps:

1. Select Security Type, WPA-PSK/WPA2-PSK from the drop-down menu.
2. Type in the WPA Passphrase (Pre-Shared Key: PSK).
3. Select **ASCII** or **Hex** in the Key Type field
4. Click **Apply Change** to allow the settings to take effect.

Note: The WPA Passphrase character limit needs to be between 8-63 characters.

Manual Pre-Shared Key supports up to 64-Hex characters. If there is no authentication server on your SOHO network, you can issue the Pre-Shared Key to the adapter that is connected to the access point. Be sure to use the same key for the wireless access point and the connected adapter.

Advanced

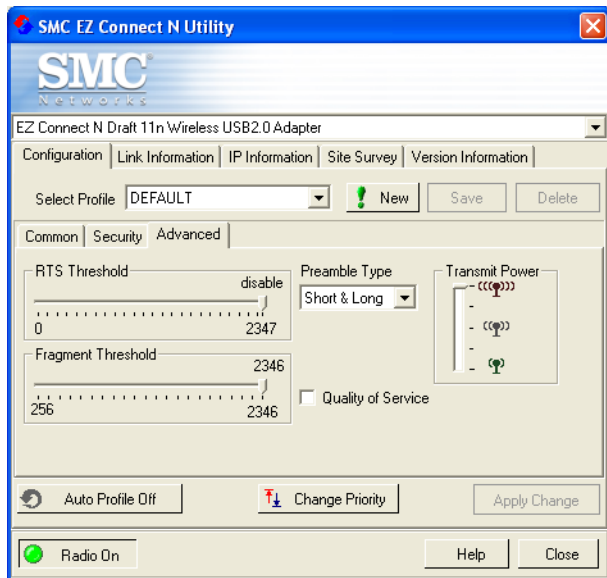

RTS Threshold – This sets the packet size threshold at which a Request to Send (RTS) signal must be sent to the receiving station prior to the sending station starting communications. Devices contending for the wireless medium may not be aware of each other. The RTS/CTS mechanism can solve this problem. The larger the threshold, the faster the speed.

Fragment Threshold – Sets the minimum packet size that can be transmitted from the adapter without being fragmented. Fragmentation can increase the reliability of transmissions because it increases the probability of a successful transmission due to smaller frame size. The larger the threshold, the faster the speed.

Preamble Type – The preamble is used to acquire the incoming signal and synchronize the receiver. If all the clients in your service area support the short preamble or can automatically set the preamble type, then setting the preamble on the access point to short can boost your throughput. (Options: Short & Long, Long only; Default: Short & Long)


Transmit Power – Move the slider bar up and down to select an appropriate transmission power. Lower power reduces interference, higher power gives more range.

Quality of Service (QoS) – The QoS function allows you to differentiate traffic types and provide high-priority forwarding service for applications such as VoIP or gaming.

Check the **Quality of Service** checkbox to enable or disable this function.

Link Information

The Link Information screen displays information of the current wireless access point to which you are connected.

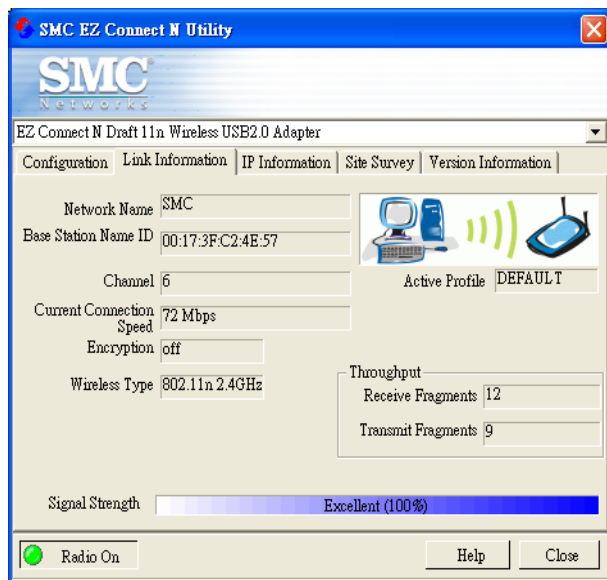

Network Name – The name of the network to which the adapter is currently connected with other clients on the network.

Base Station Name ID – The MAC address of the access point to which this adapter is connected in an infrastructure network. In an ad hoc network, the Network Name is a random number generated by the first station that communicates with other clients on the network.

Channel – The channel used to connect with the wireless device.

Current Connection Speed – Shows the speed of the current wireless connection. The Wireless USB Adapter supports up to 300 Mbps connections to your WLAN networks. This adapter is fully compliant with specifications defined in IEEE 802.11b, IEEE 802.11g and IEEE 802.11n draft v2.0 standards.

Encryption – This shows the encryption type of your wireless network.


Wireless Type – This adapter supports 802.11b, 802.11g and 802.11n modes.

Throughput – Shows the total number of data packets transmitted and received.

Signal Strength – Shows the strength of the connection between the adapter and the access point.

IP Information

This screen displays IP Information for your computer. Now that you have configured your adapter to connect to a wireless network, your adapter needs to obtain new network settings. By releasing old IP settings and renewing them with settings from the access point, you will also verify that you have configured your adapter correctly. To release network settings click on **Release**, then click on **Renew** to get new IP settings.

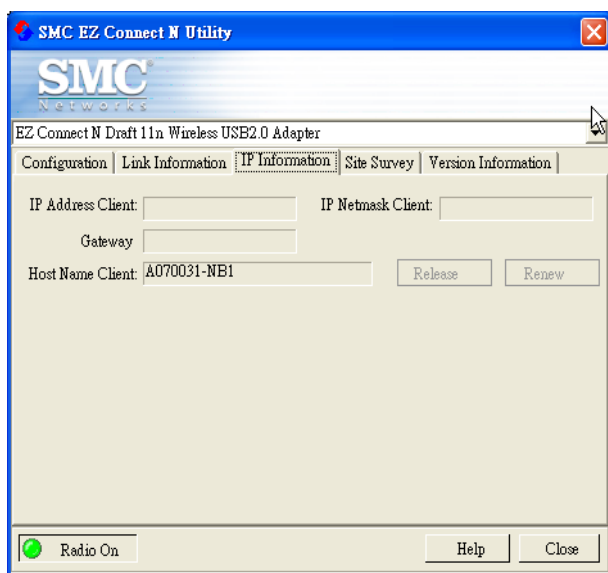

IP Address Client – Internet address of the computer.

IP Netmask Client – A mask used to determine the subnet for an IP address.

Gateway – The IP address of the network gateway.


Host Name Client – Your computer name on the network.

Release – Click on this button to release the IP address.

Renew – Click on this button to get a new IP address.

Site Survey

Site Survey scans and displays all wireless devices within range. You can choose one of them to connect to by double-clicking on an entry.

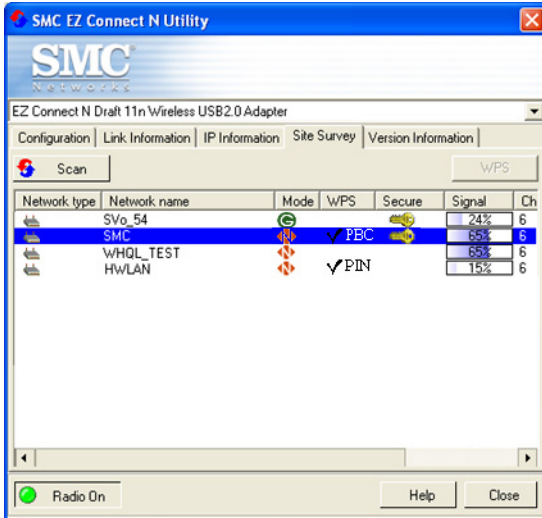

Scan – Click this button to scan for available network connections.

WPS (Wi-Fi Protected Setup) – Click this button to start using the WPS connection with the selected AP.

The Wireless USB Adapter was implemented with the ease-of-use Wi-Fi Protected Setup (WPS). WPS makes a secure wireless network much easier to achieve by using an eight-digit PIN number and the Push Button Control (PBC). The PIN number is shown on the Version Information (see "Version Information" on page 32).

Take the following steps for easy network security settings.

1. Press the WPS button of the access point to which you want to connect.

or

Click the PBC configuration button on the management screen of the access point.

2. Select the desired access point from the list.
3. Click the WPS button on the screen, or double-clicking on the selected access point.

Notes: 1. This connection procedure must be done within 2 minutes after pressing the WPS button on the access point.

2. For detailed instructions, refer to the user manual of the access point device.

Network type - Shows the network type. See “Configuration” on page 17.

Network name – Service Set ID. (See “Configuration” on page 17 for details.)

Mode - Shows the wireless connection mode. “B” means the network is operating in 802.11b mode. “G” means the network is operating in 802.11g mode. “N” means the network is operating in 802.11n mode.

WPS - Shows WPS status of the access point. A check mark indicates the WPS function is enabled. If the PIN method is in use a “PIN” will be displayed. If PBC is enabled, a “PBC” will be shown on the screen.

Secure - This shows security mechanism has been enabled. A key icon indicates the encryption function is enabled.


Signal - This shows the signal strength of the listed wireless devices.

Channel - This is the channel used for the wireless connection.

MAC address - This is the MAC address of the listed wireless devices.

Version Information

This screen shows information on the WPS PIN number, current version of the driver and the configuration utility program. You can download the latest firmware from the SMC web site at <http://www.smc.com>.

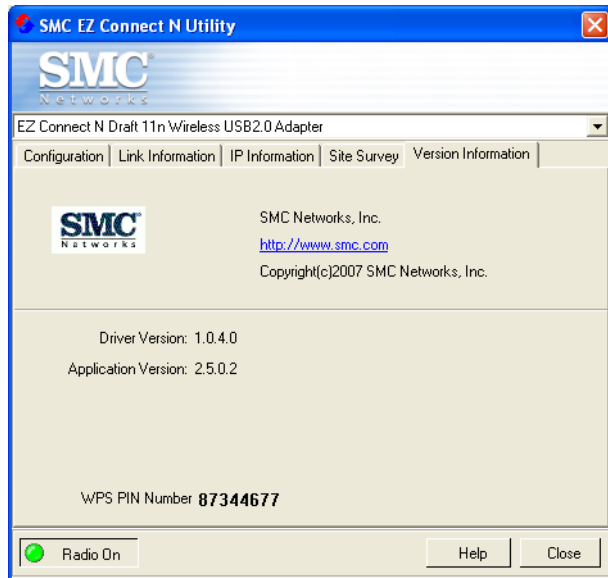

NETWORK CONFIGURATION AND PLANNING

SMC's EZ Connect N Wireless Solution supports a stand-alone wireless network configuration, as well as an integrated configuration with 10/100 Mbps Ethernet LANs.

The SMCWUSBS-N2 can be configured as:

- Ad hoc - for small groups that only communicate with each other, without access points
- Infrastructure - for wireless LANs

Network Topologies

Ad Hoc Wireless LAN

An ad hoc wireless LAN consists of a group of computers, each equipped with one wireless adapter, connected via radio signals as an independent wireless LAN. Computers in a specific ad hoc wireless LAN must therefore be configured to the same radio channel. An ad hoc wireless LAN can be used in a SOHO or temporary environment.




Infrastructure Wireless LANs

The SMC 802.11 N access point (SMCWBR14S-N) can also provide wireless workstations with access to a wired LAN. An integrated wired and wireless LAN is called an infrastructure configuration. A Basic Service Set (BSS) consists of a group of wireless PC users, and an access point that is directly connected to the wired LAN. Each wireless PC in this BSS can talk to any computer in its wireless group via a radio link, or access other computers or network resources in the wired LAN infrastructure via the access point.

The infrastructure configuration not only extends the accessibility of wireless PCs to the wired LAN, but also extends the effective wireless transmission range for wireless PCs by passing their signal through one or more access points.

A wireless infrastructure can be used for access to a central database, or for connection between mobile workers, as shown in the following figure.

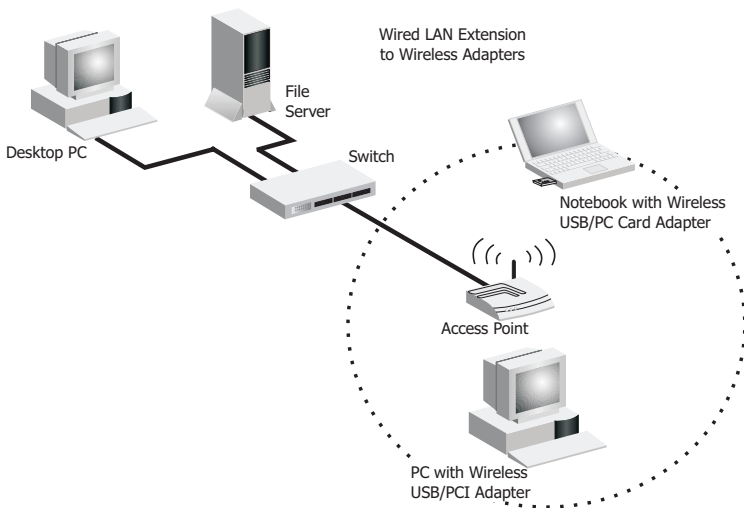

Setting the Communication Domain

Stationary Wireless PCs

The Basic Service Set (BSS) is the communication domain for each access point. For wireless PCs that do not need to support roaming, set the domain identifier (SSID) for the wireless card to the SSID of the access point to which you want to connect. Check with your administrator for the SSID of the access point to which you are connecting.


Roaming Wireless PCs

A wireless infrastructure can also support roaming for mobile workers. More than one access point can be configured to create an Extended Service Set (ESS). By placing the access points so that a continuous coverage area is created, wireless users within this ESS can roam freely. All wireless adapters and access points within a specific ESS must be configured with the same SSID and to the same radio channel.

You can configure the wireless client to connect to a specific wireless network or to the first available wireless network.

- If you configure the client to connect to a specific wireless network, the client establishes a radio connection to the AP in the specified wireless network that provides the best communications quality. APs in a different wireless network are ignored.
- If you configure the client to connect to the first available wireless network (the SSID = ANY), the client establishes a radio connection to the AP that provides the best communications quality. Be aware that if there are multiple wireless networks, the client could connect to an AP that is not in the network you want to join.

- In either configuration, the client automatically matches the radio channel used by the AP.

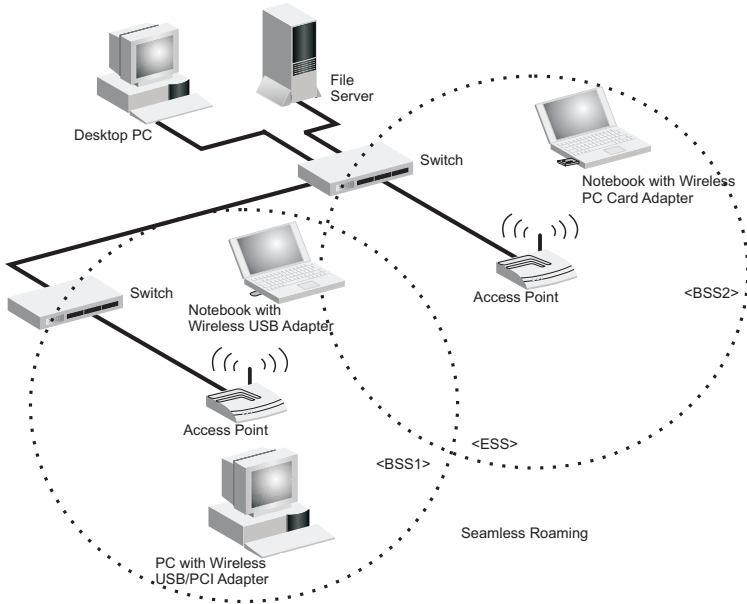

TROUBLESHOOTING

Check the following troubleshooting items before contacting SMC technical support.

Adapter Installation Problems

If your computer cannot find the SMCWUSBS-N2 adapter or the driver software does not install correctly, check the following:

- Make sure the adapter is securely seated in the 2.0 USB slot. Check for any hardware problems, such as physical damage to the card's connector.
- Try the card in another USB slot. If this also fails, test your PC with another wireless adapter that is known to operate correctly.
- Make sure your PC is using the latest BIOS.
- If there are other network adapters in the PC, they may be causing conflicts. Remove all other adapters from the PC and test the wireless adapter separately.
- If it still does not work, go to "Control Panel" and delete the adapter from your system. Remove the wireless adapter from your computer. Restart your computer and reinstall the card and the driver and utility.

Network Connection Problems

If the Link LED on the SMCWUSBS-N2 adapter does not light, or if you cannot access any network resources from your computer, check the following:

- Make sure the correct software driver is installed for your operating system. If necessary, try reinstalling the driver.
- Make sure the computer and other network devices are receiving power.
- The access point you want to connect to may be defective. Try using another access point.
- Make sure the SSID and security settings of the adapter are set to the same as the access point to which you are connecting.

If your wireless station cannot communicate with a computer in the Ethernet LAN when configured for Infrastructure mode, check the following:

- Make sure the access point that the station is associated with is powered on.
- If the connection still fails, change the access point and all the clients within the BSS to another radio channel.
- For a station with roaming disabled, make sure the SSID is the same as that used by the access point, or the same as that used by the access points in the extended service set (ESS).

SPECIFICATIONS

General Specifications

Functional Criteria

Wireless Network

- IEEE802.11b: up to 11 Mbps
- IEEE 802.11g: up to 54 Mbps
- IEEE802.11n draft v2.0: up to 300 Mbps (in 40 MHz)
- Operating Range Outdoor: Up to 300 m (984 ft)
- Indoor: Up to 100 m (328 ft)

Radio Signal

Signal Type

- Direct Sequence Spread-Spectrum (DSSS)
- Modulation CCK, OFDM

Operating Frequency

- USA (FCC) and Canada (IC): 2.412 ~ 2.462 GHz
- Europe (ETSI): 2.412 ~ 2.472 GHz
- Spain: 2.457 ~ 2.462 GHz
- France: 2.457 ~ 2.472 GHz
- Japan (STD-T66/STD-33): 2.412 ~ 2.484 GHz

Operating Channels

- USA (FCC) and Canada (IC): 11 channels
- Europe (ETSI): 13 channels
- Spain: 2 channels
- France: 4 channels
- Japan (STD-T66/STD-33): 14 channels

Sensitivity

- 68 dBm (typical)

Specifications

RF Output Power

11b : 23.30 dBm

11g : 25.14 dBm

Draft 11n

20MHz: 21.57 dBm

40MHz: 21.65 dBm

Physical Characteristics

Dimensions

84.10 * 27.08 * 12.30 mm (3.31 * 1.07 * 0.48 inch) (L*W*H)

Weight

27.5 g (0.06 lb)

Antenna

Built-in antenna

LED Indicators

Network Link

Host Interface

USB 2.0 interface

Power Voltage

DC5V +/- 5%

Power Consumption

Tx mode: 460 mA, Rx mode: 250 mA

Standards Conformance

Wireless Standard

IEEE 802.11b, IEEE 802.11g, IEEE 802.11n draft v2.0

Environmental

Temperature

Operating: 0 to 40 °C (32 to 104 °F)

Storage: -10 to 70 °C (14 to 158 °F)

Humidity: 5 to 90% (non-condensing)

Vibration/Shock/Drop

IEC 68-2-34, IEC 68-2-27, IEC68-2-32

Certification

CE Mark

EN 50081-1, EN 55022 Class B

EN 50082-1, EN 61000-4-2

Emissions

FCC Part 15(B), ETS 300-328, VCCI

Software Drivers

Windows 2000

Windows XP

Windows Vista

TECHNICAL SUPPORT

From U.S.A. and Canada (24 hours a day, 7 days a week)

Phn: (800) SMC-4-YOU / (949) 679-8000

Fax: (949) 679-1481

ENGLISH

Technical Support information available at www.smc.com

FRENCH

Informations Support Technique sur www.smc.com

DEUTSCH

Technischer Support und weitere Information unter www.smc.com

SPANISH

En www.smc.com Ud. podrá encontrar la información relativa a servicios de soporte técnico

DUTCH

Technische ondersteuningsinformatie beschikbaar op www.smc.com

PORTUGUES

Informações sobre Suporte Técnico em www.smc.com

SWEDISH

Information om Teknisk Support finns tillgängligt på www.smc.com

INTERNET

E-mail address: techsupport@smc.com

Driver updates

http://www.smc.com/index.cfm?action=tech_support_drivers_downloads

World Wide Web

<http://www.smc.com/>

